



Sensible Load and Required Air Volume

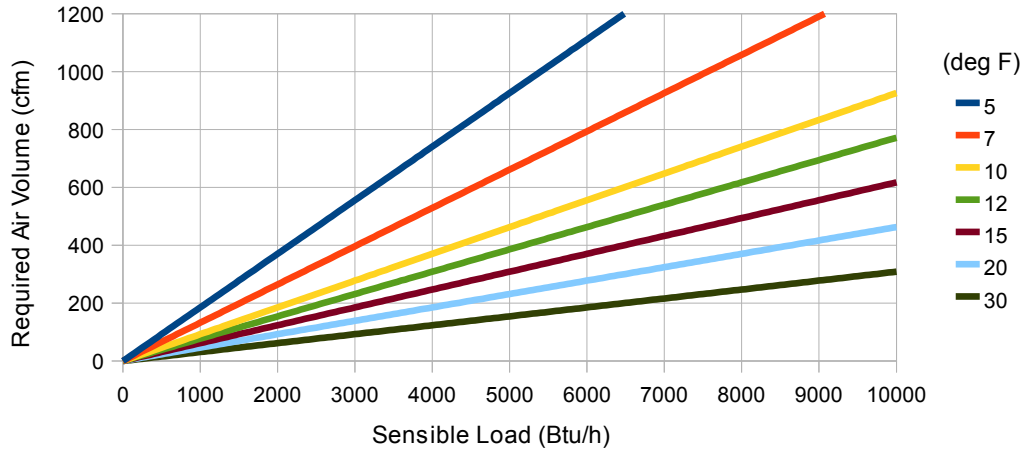

Temperature Difference Between Entering Air and Room Air

Sensible Load and Required Air Volume

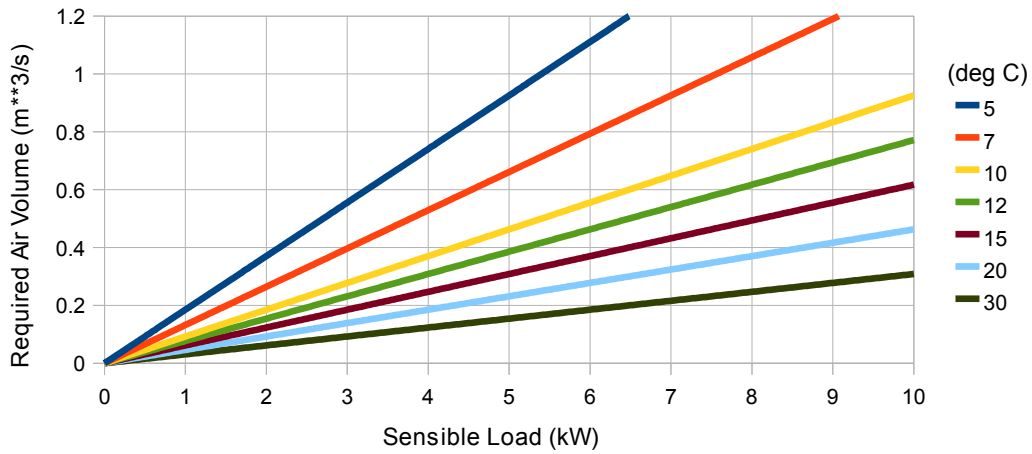

The Engineering ToolBox

www.EngineeringToolBox.com